


Ultraply Premium Underlayment[®]



Installation Instructions

Acclimation: Condition Ultraply[®] Underlayment panels 18 to 48 hours to the room environment in which they will be installed.

- 1) Install Ultraply[®] with the stamp side down before installing the finished floor.
- 2) Install the long dimension of the panel perpendicular to the floor joists for maximum rigidity.
- 3) Make sure your Ultraply[®] Underlayment seams offset any subfloor panel seam by at least 6".
- 4) Stagger panels, ashlar fashion, so that four corners do not meet. Offset Underlayment joints by at least 16".
- 5) Leave a minimum 1/8" gap at walls.
- 6) Lightly butt all panels, but do not force sheets into place.
- 7) Fasten panels securely to a structurally sound, smooth, clean and dry wood subfloor with one of the following non-staining fasteners: divergent staples, chiseled end staples or ring groove shank nails.
- 8) Make sure fasteners do not penetrate through the subfloor or into the floor joists.
- 9) Position fasteners in the field on 4" inch centers.
- 10) Attach edge fasteners 1 1/2" apart and 3/8" from edge.
- 11) Set fasteners flush or slightly below the panel surface.
- 12) Fill all edge joints and other surface depressions with **ULTRAPATCH (a Moreland Company product) or some other high quality PORTLAND BASED LATEX MODIFIED PATCH**, and sand smooth. Make sure patch is **FULLY DRY** before installing the finished floor.

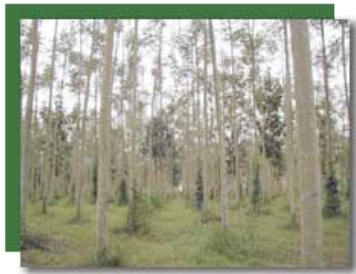


Plantation

* Notes & Exceptions:


The Moreland Company has the highest quality of standards in the market. Environment and temperature should be noted to ensure acclimation. The finished floor should be installed immediately after Ultraply[®] Premium Underlayment to prevent job site influenced damage. Moreland Company is not responsible for faulty installation. No defective material is to be installed. Final inspection of each panel is the responsibility of the installer.

Panel Pattern

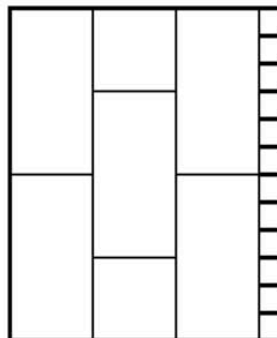

Ashlar Fashion
at least 16"

Staple Pattern

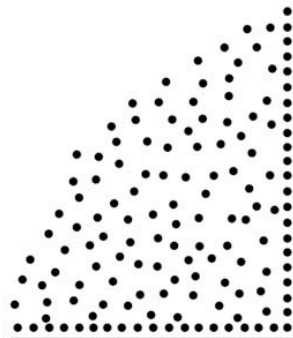

Butterfly Pattern
4" on center

Please visit our website at <http://www.morelandcompany.com/> or <http://www.ultraply.net/>

"Providing Our Customers With The Finest Wood Products Worldwide"

MORELAND COMPANY USA

1617 S. Tuttle Ave, 3rd Floor • Sarasota, FL 34239 • 941-953-9663 • 800-397-7769 • Fax 941-953-5180